
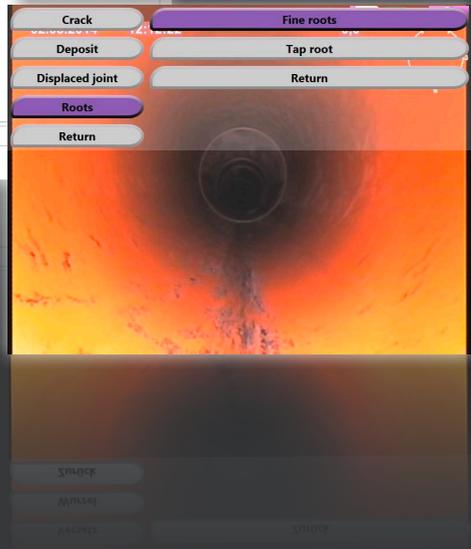


Damage Catalog Editor

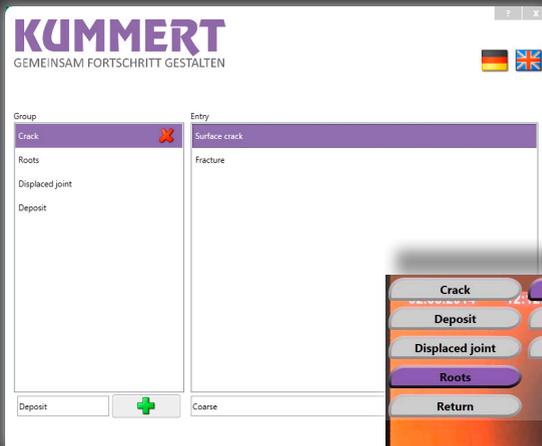


Quick User Guide
Keep for future reference!

CONTENTS

1. Damage Catalog Editor	2
1.1 Installation and Start of Program	2
1.2 Create Damage Catalog	3
1.3 Export Damage Catalog	4
2. CompactPlus	5
2.1 Import Damage Catalog.....	5
2.2 Damage Catalog in Image and Video Memory	6
2.3 Damage Catalog in a Project.....	7

1. DAMAGE CATALOG EDITOR

1.1 Installation and Start of Program

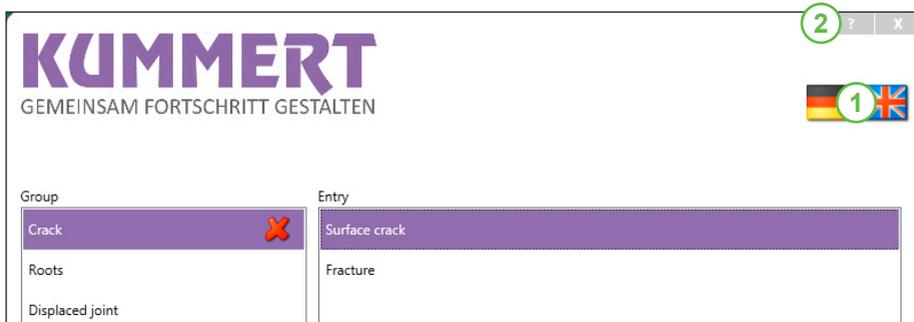


Go to www.kummert.de, select the menu option **Download Center** and then the sub menu option **Updates - CompactPlus**, where you will find the Damage Catalog Editor available for download.

Click on the link for **Damage Catalog Editor** and then on the button **Run**. Follow the installation instructions.

Start the program and select a language first. To do so, click on the respective **flag (1)**.

To receive information on how to use the Damage Catalog Editor, click on the question mark **?** (2).

1.2 Create Damage Catalog

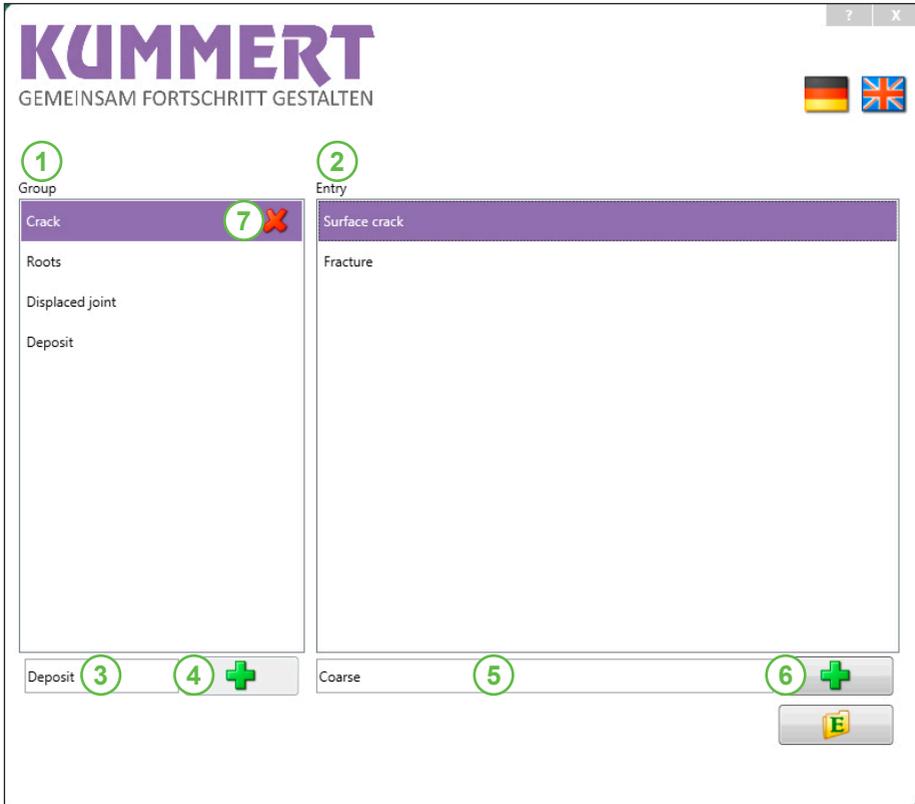

The Damage Catalog Editor lets you create an individual list with free texts. Afterwards, simply store the list on the CompactPlus.

Each observation consists of two levels: A **group (1)** and an **entry (2)**. Multiple entries can be assigned to one group.


Text length for **groups** is limited to 20 characters, for **entries** to 35 characters.

To create a new group, enter the **text (3)** and click on the button **Add group (4)**. To create an entry, first select the parent group. Then enter the **text (5)** and click on the button **Add entry (6)**.


To delete a group/an entry, move the mouse across it and click on the symbol **Delete (7)**.

1.3 Export Damage Catalog

4

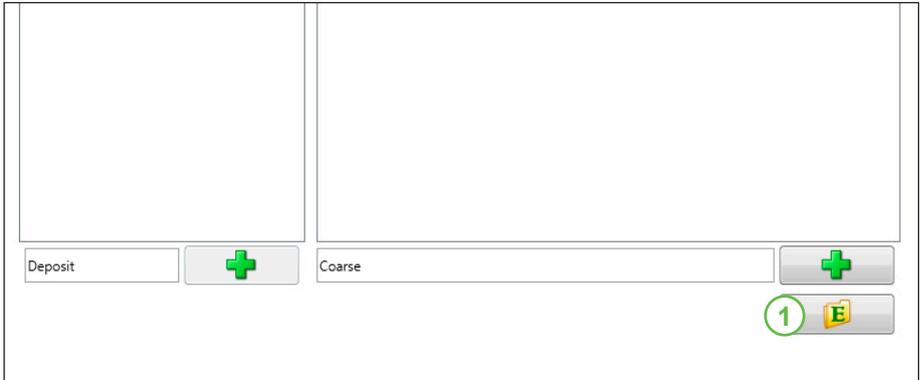

To save the damage catalog onto a USB thumb drive, Click on the button **Export (1)**.

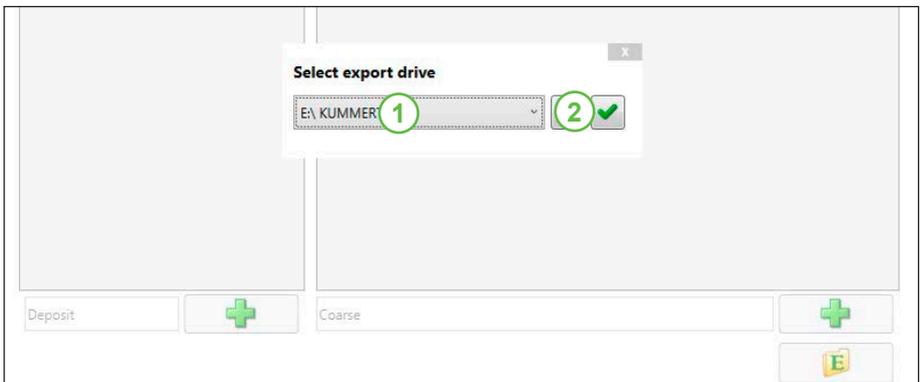

Select a **storage medium (1)** and click on the button **Export (2)**.

2. COMPACTPLUS

2.1 Import Damage Catalog



Make sure the CompactPlus software is at least of **version 2.0.1**. (Information on how to install an update on the device can be found in the instruction manual Compact-Plus.)

Connect the USB thumb drive to the CompactPlus.

Click on the button **Setup (1)**.



Select the button **Text memory/Damage catalog (1)** and then **Import (2)**.




Once the import process has completed, a respective **message (1)** will appear.


2.2 Damage Catalog in Image and Video Memory

6


1

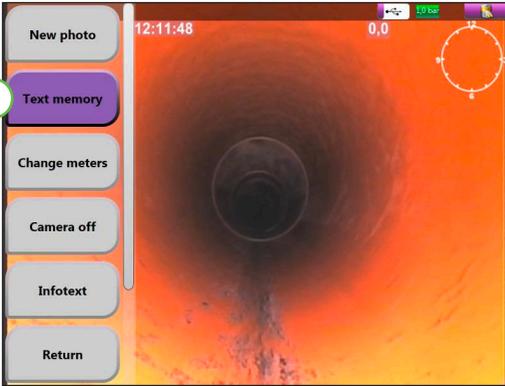

In order to overlay a text from the damage catalog in a photo or video, click on the button **Text memory/ Damage catalog (1)**.

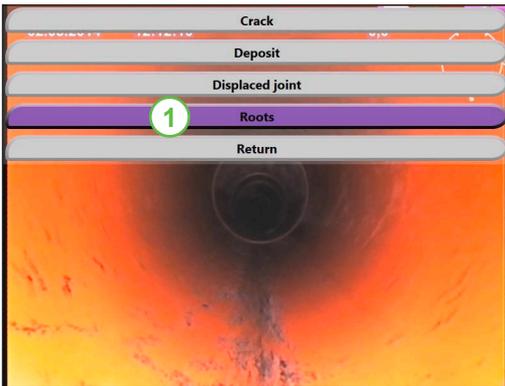


Select a **group (1)**.

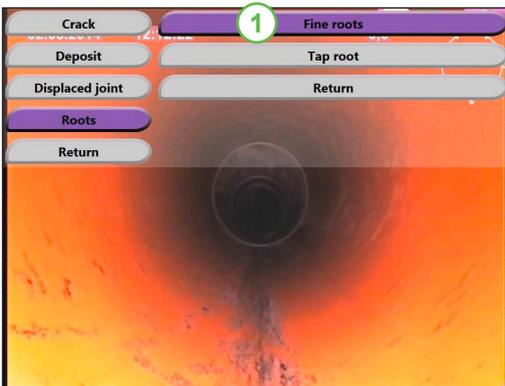

Select the correct **entry (1)**.


All texts will be overlaid in the video/photo immediately.

2.3 Damage Catalog in a Project

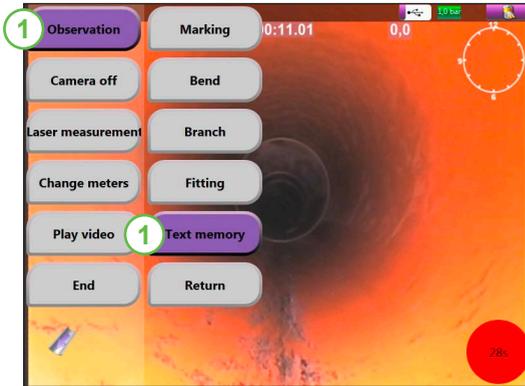


In order to overlay a text from the damage catalog, click on the button **Observation (1)** and **Text memory (2)**.

7

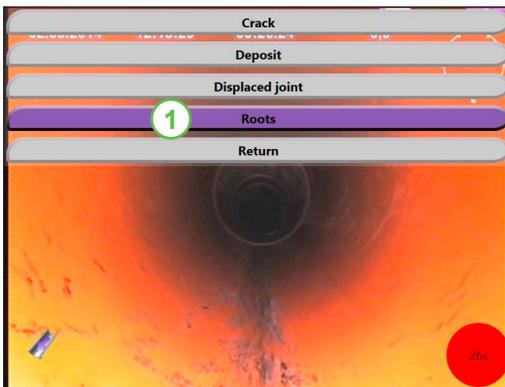

Select a **group (1)**.

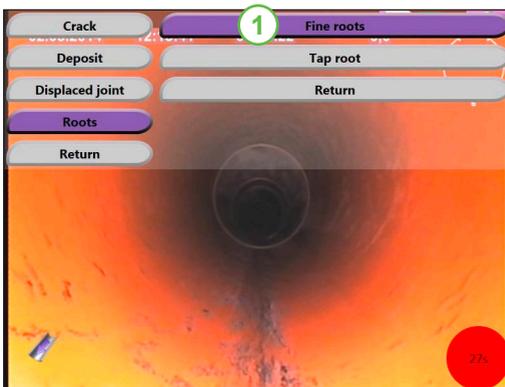

Select the correct **entry (1)**.

All entries will be saved with the respective code for **General Remark/Comment**.

All texts will be overlaid in can2D/can3D® after post-editing has been completed.

Manufacturer:

KUMMERT
CREATING PROGRESS TOGETHER

Kummert GmbH
Albert-Einstein-Straße 8
D - 97447 Gerolzhofen
Phone: +49 (0) 9382 9727-0
Fax: +49 (0) 9382 9727-900
info@kummert.de
www.kummert.de

Distributor:

(Company Stamp)

Errors and technical changes excepted. Color variations may occur due to printing techniques.